



Ensure the window and the espag handle are in the closed position. Insert a fixing screw into the top fixing hole as shown above (a).

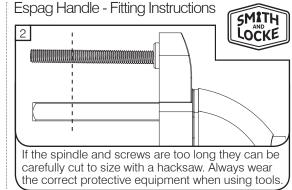

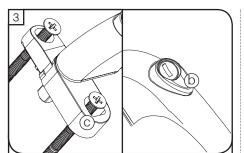

Press button (b) and rotate lever 90° to reveal bottom fixing hole (c) (caution window will open). Insert screw & carefully tighten.

Close handle to re-engage the locking mechanism. Slide on the screw cover (e) until fully engaged.

Maintenance:

Window handles should be cleaned with a soft, dry cloth. If further cleaning is required we recommend a mild solution of warm, soapy water on a soft cloth. Dry thoroughly afterwards.

20.09.2022