

IDEAL EGRESS FRICTION HINGE OPERATING GUIDE

The Ideal Egress Friction Hinge does not require the operation of any buttons and has an easy mechanism from the Egress to the Easy Clean function. Follow the steps below to clean external surfaces.

1. The window opens initially to an egress position.
2. Open the window fully. Once opened continue to apply pressure in the same direction to release the catches.
3. While maintaining pressure with one hand, hold the upright frame with your other hand and slide the window evenly across (from A to B) from the OPERATING POSITION to the CLEANING POSITION.
4. The window is now in the easy clean position.
5. To reset, close the window in the usual manner using the handle. There should be no need to use force.

