


Fitting Instructions

ProStyle Modern Oval Door Knocker

Through fix

1. Decide the best location for your knocker on your door. Check that your knocker corresponds with the measurements shown in the diagram right.
2. With a pencil; mark the hole points, as per the measurements. Double check the measurements and carefully drill pilot holes using a 2mm drill bit.
3. Using a 7mm drill bit, drill the top and bottom holes for the fixing screws. Drill as straight as you can, keeping the drill at a right angle (90 degrees to the door).
4. Using a 5mm drill bit, drill the upper and lower locating boss holes to a depth of 1cm.
5. Position the door knocker and the separate striker plate over the fixing holes and check that all are in alignment and the correct depth. Attach the bolts to the back of the knocker and the striker plate and guide the bolts through your door.
6. Mark the bolts and remove them to cut the excess off. Double check the depth of the door allowing for the bolts to go through And the nuts to screw onto after cutting. Reposition the door knocker and tighten up the nuts using a small spanner.

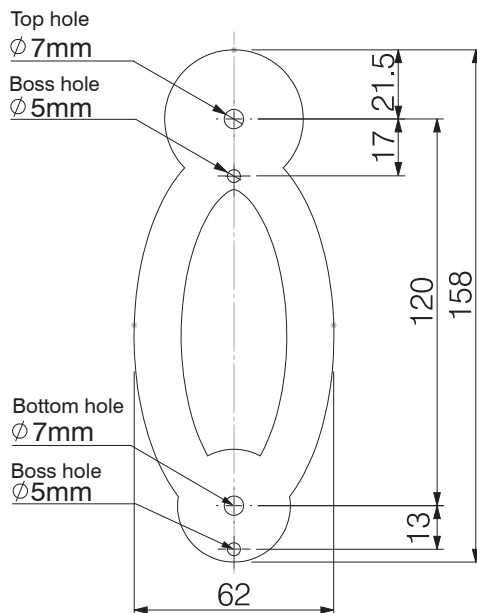

Testing

Check that both parts of the knocker are flat against the door and the fixing bolts are fastened securely. At this point there should be no movement between the knocker parts and door. Test by operating the knocker arm several times.

Maintenance

To ensure that your product maintains its high quality finish please;

DO wipe regularly with a soft, damp cloth to remove any finger prints. We recommend that you only use warm soapy water with a lint free cloth. Wipe dry with a soft clean cloth.

DON'T use abrasive cleaners or scouring pads, bleach or solvents.

ALWAYS USE APPROPRIATE PPE WHEN USING TOOLS