


240mm Backplate

To ensure this handle fits your door please check that the following 3 measurements match your requirements:

1. The measurement from the centre of the handle lever to the centre of the keyhole known as the PZ distance - the PZ distance of this handle is 92mm
2. The distance between the centre of the top screw and the centre of the bottom screw - this distance on this handle is 211mm
3. The length of the handle backplate, top to bottom - this handle backplate is 240mm long

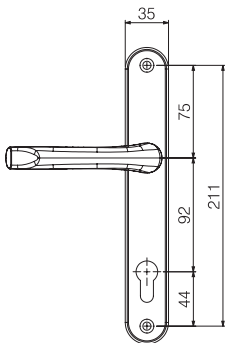

Fitting Instructions


Insert correct length spindle supplied (longest for PVCu, shortest for timber and composite) into the lever without screw fixing holes. Ensuring that the lever is held at 90°, slide the spindle through the lock mechanism from the external side of the door. The handle backplate should also fit over the cylinder lock.

The handle backplate with the two screw fixing holes should be placed on the inside of the door. Select the correct length screws supplied (longest for PVCu, shortest for timber and composite). Insert the two screws and screw together taking care not to overtighten.

220mm Backplate

To ensure this handle fits your door please check that the following 3 measurements match your requirements:

1. The measurement from the centre of the handle lever to the centre of the keyhole known as the PZ distance - the PZ distance of this handle is 92mm
2. The distance between the centre of the top screw and the centre of the bottom screw - this distance on this handle is 122mm
3. The length of the handle backplate, top to bottom - this handle backplate is 220mm long

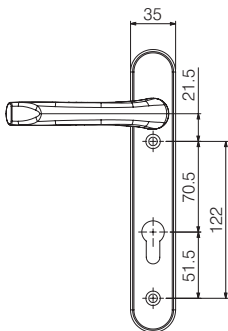

Fitting Instructions

Insert correct length spindle supplied (longest for PVCu, shortest for timber and composite) into the lever without screw fixing holes. Ensuring that the lever is held at 90°, slide the spindle through the lock mechanism from the external side of the door. The handle backplate should also fit over the cylinder lock.

The handle backplate with the two screw fixing holes should be placed on the inside of the door. Select the correct length screws supplied (longest for PVCu, shortest for timber and composite). Insert the two screws and screw together taking care not to overtighten.