


# Supa™ Town Lever On Rose Door Handle - Installation Guide




# Supa™ Town Lever On Rose Door Handle

## Installation Guide

**1.** The fixing bracket is supplied pre-fitted with double-sided 3M adhesive tape. To install, remove the protective film to expose the adhesive surface.

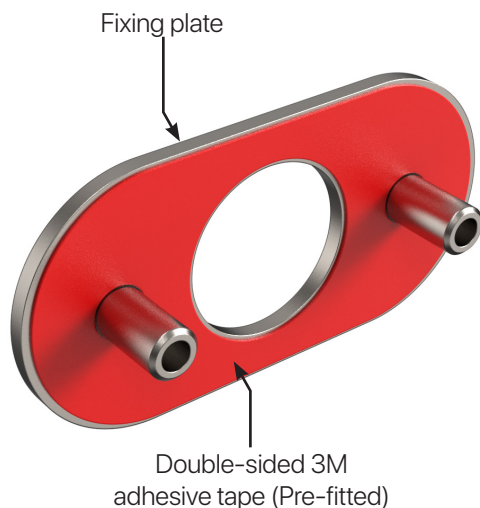


**2.** Position the fixing plate onto the gearbox, ensuring alignment with the designated screw boss locations.

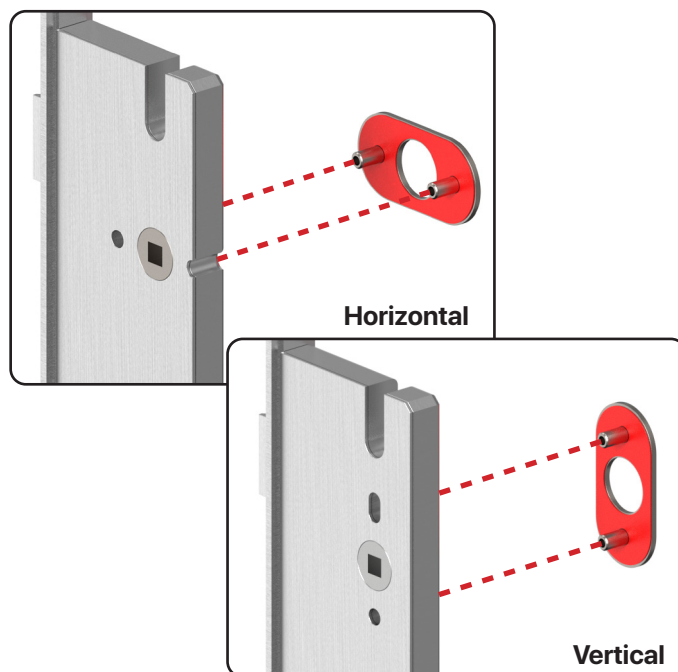

**3.** Install the gearbox into the prepared door cavity. Ensure that routing allowances accommodate for the additional depth of the fixing plate.



**4.** Insert the spindle & position the handle, then insert & tighten the screws ensuring they engage with the fixing plate (when fitting horizontally, angle the lever to fit the second screw). If required, add surface fixings in the spare screw positions, taking care not to hit the gearbox.

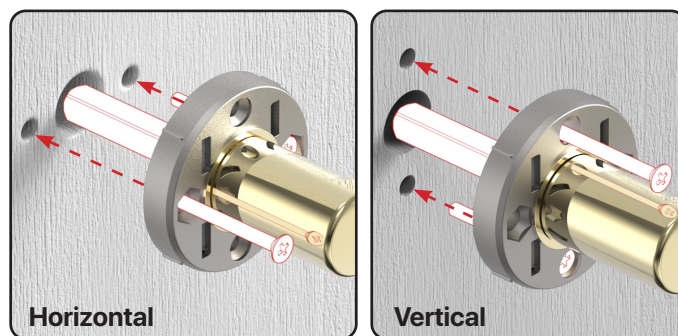

**5.** Fit the cover.

