





Harbour Espag Handle Fitting Instructions

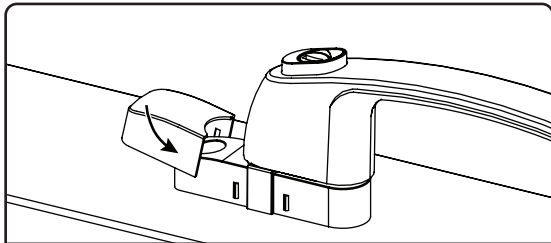

With the handle securely attached to the profile, slide the top screw cover into position at a 45° angle, until flat & fully engaged.

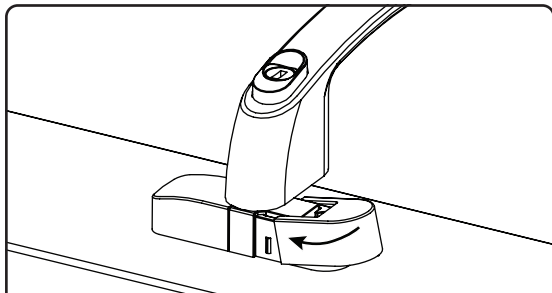

Press the button and rotate the handle counter-clockwise by 90°. Slide the bottom screw cover into position at a 45° angle until flat & fully engaged. Return the handle to its original position.