





Harbour TBT Handle Fitting Instructions

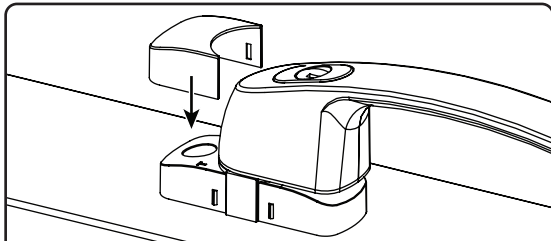

With the handle securely attached to the profile, align the top screw cover above & push down into place, until flat & fully engaged.

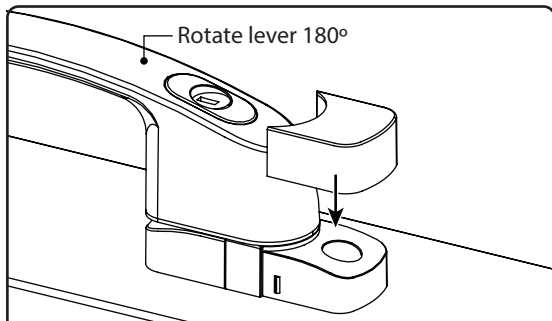

Rotate handle 180°. Align the bottom screw cover above & push down into place, until flat & fully engaged. Return the handle to its original position.